

# ENTROTEC


## ED RANGE TELEPHONE - INSTRUCTIONS FOR USE



### GENERAL

The door entry system is designed so that you have a limited time to answer a call and allow the caller access or not. This is to save inconvenience to other users of the system

- \* When called up the telephone will give a distinctive pulsing tone for up to 25 seconds and then stop. There is approximately 30 seconds to answer the call from the start of the call tone. If the call is not answered within the call period, then the system will reset to allow other users to make a call
- \* To answer the call remove the handset from the cradle and speak to the caller. There is approximately 2 minutes speech time before the system will reset
- \* To allow access, press the lock release button and this will open the door for approximately 10 seconds
- \* On completion of the call, replace the handset to reset the system

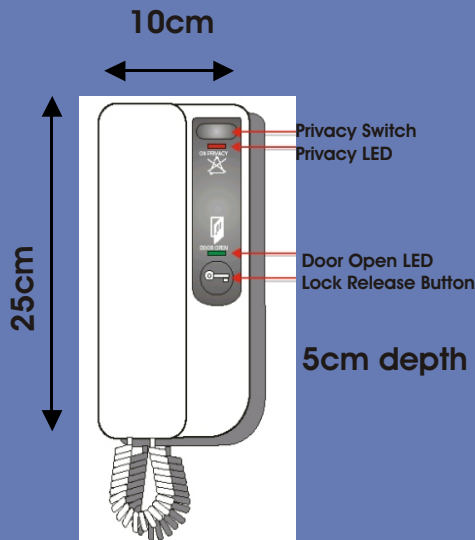

### FEATURES

#### PRIVACY SWITCH

- ED 1 - No Privacy Switch
- ED 3 - Latch on/off
- ED 4 - When switch off will stay off until reset
- ED 6 - Latch on/off
- ED 9 - When switch off will stay off until reset

#### ADJUSTABLE CALL TONE

- ED 6
- ED 9

### PRIVACY SWITCH - ED3/4/6/9

If you do not wish to be disturbed press the privacy switch (The LED will illuminate **RED** to remind you that the handset is in privacy mode). When in this mode the call tone is muted until reset by pressing the switch again.

A built in timer automatically resets the switch if it has been forgotten. This time period of up to 8 hours is preset on installation. If a longer period is required then press the privacy button twice to restart the timer. If you wish to terminate the privacy period press the privacy button once

### ADJUSTABLE CALL TONE - ED6/9

Large lock release button, engineer adjustable call tone volume, door monitoring LED (**Green**), Pictorial symbol for door open and privacy switch with 5 minutes to 8 hour nuisance timer and privacy on LED (**Red**)