


## ED4 TELEPHONE-INSTRUCTIONS FOR USE

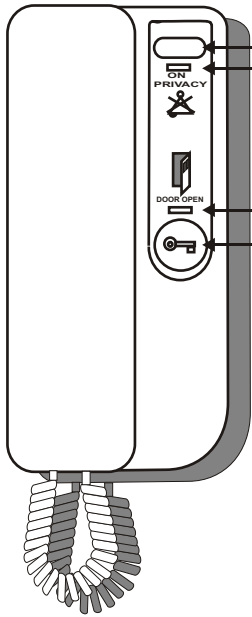

Privacy switch  
Privacy on LED

Door open LED  
Lock release button

### GENERAL NOTES


The door entry phone system is designed so that you have a limited time to answer a call and allow the caller access or not. This is to save inconvenience to other users of the system.

- 1) When called up the telephone will give a distinctive pulsing tone for up to 25 seconds and then stop. You have approx. 30 seconds to answer the call from the start of the call tone. If the call is not answered within the call period, then the system will reset to allow other visitors to make a call.
- 2) To answer the call remove the handset from the cradle and speak to the caller. (You have approx. 2 minutes to speak to the caller and then the system will reset).
- 3) To let the caller gain access, press the lock release button and this will open the door for approx. 10 seconds.
- 4) When you have completed the call, replace the handset to reset the system.

### PRIVACY SWITCH

- 5) If you do not wish to be disturbed or annoyed by nuisance calls, press the privacy switch (the LED will illuminate to remind you that the handset is in privacy mode). When in this mode the call tone is muted until you reset the switch by pressing it again. There is also a built in timer that automatically resets the switch if you forget to do so. This time period (up to 8 hours) is preset on installation but if you require a longer privacy period then press the privacy switch twice to restart the timer. If you wish to terminate the privacy period press the privacy switch once.

## ED4 HANDSET CONNECTION DIAGRAM

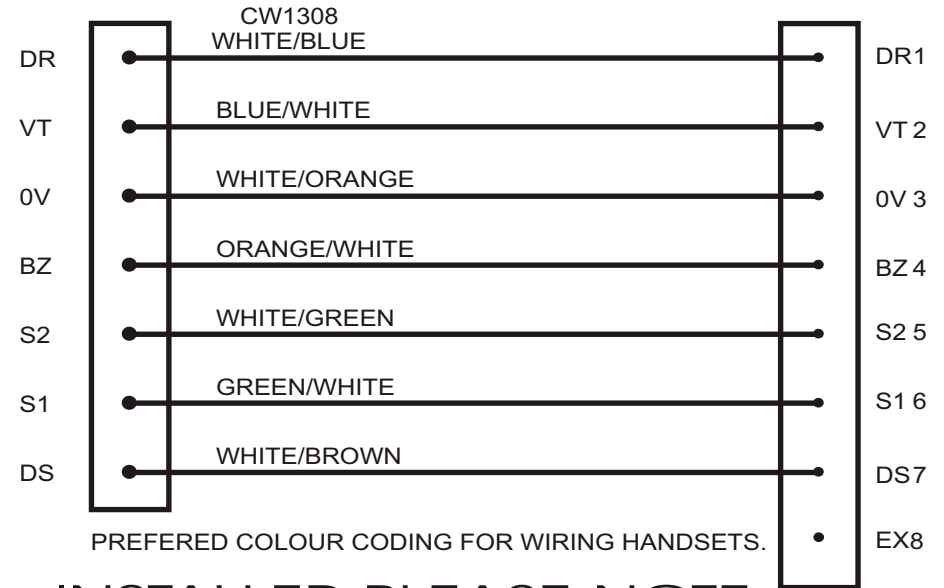

## INSTALLER PLEASE NOTE

1. All ED4 handsets have the time set to 8 hours.

This can be changed to 5min., 15 min., 30min., 1hour, 2 hours, 4 hours or 6 hours by repositioning the jumper links at the left hand of the Privacy Switch on the PCB.

Lk1	Lk2	Lk3	Time
0	0	0	= 5mins
0	0	1	= 15mins
0	1	0	= 30mins
0	1	1	= 1hr
1	0	0	= 2hr
1	0	1	= 4hr
1	1	0	= 6hr
1	1	1	= 8hr

1 = LINK IN  
0 = LINK OUT

3. Terminal 8 must only be connected to an Extension Sounder or Flashing Beacon

DATE: 21/03/05	DRG.NO.	DESC.	DRAWN BY:
ENTROTECLTD Access House 5 Ashwood Court Lingwood E16 3 DTL Tel: 01506 882250 Fax: 01506 883233	WIR0795/013 Issue 5	WIRING DIAGRAM AND COLOUR SCHEME FOR ED4 HANDSETS	V.A.TURNER
<b>IMPORTANT.</b> ALL CABLES TO BE KEPT WELL AWAY FROM MAINS VOLTAGE CABLES. PLEASE CONSULT OUR INSTALLATION GUIDELINE SHEET OR CONTACT OUR TECHNICAL DEPT. FOR ADVICE ON 01506 441100.			CHECKED BY: